 
6-Key RF Remote Controller

Model No.: RM1/RM2

1 zone dimming/6-key/Wireless remote 30m distance/CR2032 battery



1 Zone CCT

CE RoHS and LVD RED

Features

- Apply to single color or dual color LED controller.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.

- 47.00 mm -100.00 m

Match Remote Control (two match ways)

Use the controller's Match key

immediately press on/off key on the remote.

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times

means all matched remotes were deleted.

Short press match key,

Match:

Delete:

Mechanical Structures and Installations

8.00 mm



Note: Before the first use. please remove the protective film on the battery.

Technical Parameters

Input and Output		Safety and El
Output signal	RF(2.4GHz)	EMC standard (E
Working voltage	3VDC(CR2032)	Safety standard(I
Working current	< 5 m A	Radio Equipment
Standby current	< 2µA	Certification
Standby time	2 years	
Remote distance	30m(Barrier-free space)	Warranty

Ta: -30°C ~ +55°C

Tc:+85°C

IP20

Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,LVD,RED

5 years Warranty

ety and EMC	
C standard (EMC)	EN301 489,EN 62479
ety standard(LVD)	EN60950
io Equipment(RED)	EN300 328
ification	CE,EMC,IVD,RED

The LED indicator fast flash a few times means match is successful

Use Power Restart

Match:

End user can choose the suitable match/delete ways. Two options are offered for selection:

Switch off the power, then switch on power again, immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power again, immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.


User Manual Ver 1.0.2

IP rating

Environment

Operation temperature

Case temperature (Max.)

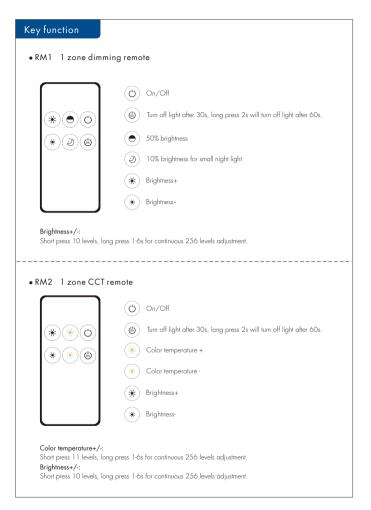

Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.