## Touch Wheel RF Remote Controller

## Model No.: RT1/RT6/RT8

1,4,8 zone dimming/Touch color wheel/Wireless remote 30m distance/AAAx2 battery







RT1 1 Zone Dimming

4 Zone Dimming

Warrant

RT8 8 Zone Dimming

CE RoHS @MC LVD RED

## **Features**

- · Apply to single color LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- · Operate with LED indicator light.

### Technical Parameters


Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAAx2)
Working current	<5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m(Barrier-free space)

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC) EN301 489,EN 6247	79
Safety standard(LVD) EN60950	
Radio Equipment(RED) EN300 328	
Certification CE,EMC,LVD,RED	

vvariality	
Warranty	5 years
Weight	
Net weight	0.048kg
Gross weight	0.088kg

### Mechanical Structures and Installations

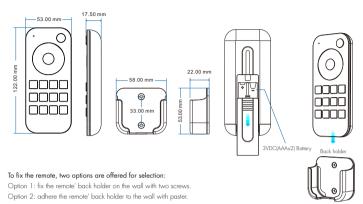

# Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds. the touch wheel will enter sleep state, you need press any key to make touch wheel guit sleep state.

# Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

# Use the controller's Match key

#### Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote

The LED indicator fast flash a few times means match is successful

#### Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart

#### Match:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

#### Delete:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted

# Key function

### • RT1 1 zone dimming remote



: Turn on/off light.

: Touch to change brightness.

: Adjust brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

: Small night brightness (10%).

: Turn off light after 30s, long press 2s will turn off light after 60s

25%, 50%, 75%, 100% brightness.

S<sub>1</sub> S<sub>2</sub> S<sub>3</sub> S<sub>4</sub> : Short press recall the scene,

long press 2s save current brightness into S1/2/3/4. the LED indicator display green when save OK.

#### • RT6 4 zone dimming remote



: Short press turn on/off all zone light.

: Touch to change current zone brightness.

: Short press select and turn on zone light, long press 2s turn off zone light. Short press multiple zone key fastly, will select multiple zone synchronously.

: 25%, 50%, 75%, 100% brightness for current selected zone.

: Short press recall the scene, long press 2s save current state into \$1/2/3/4. the LED indicator display green when save OK. 4 zone recall or save synchronously.

### • RT8 8 zone dimming remote



: Short press turn on/off all zone light.

: Touch to change current zone brightness.

1 2 3 4 5 6 7 8

: Short press select and turn on zone light, long press 2s turn off zone light. Short press multiple zone key fastly, will select multiple zone synchronously.

 $S_1$   $S_2$   $S_3$ 

: Short press recall the scene, long press 2s save current state into \$1/2/3/4. the LED indicator display green when save OK. 8 zone recall or save synchronously.

# Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity.
  A long time without the remote control, remove the battery.
  When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

User Manual Ver 1.0.7